
SERVICE INSTRUCTION

READ BEFORE INSTALLING

The firmware on the AdaptaFlow Node Adapter (P/N A10159-01) has been changed. Starting with version 1.9, SW2-5 should be "ON" (up) for AdaptaFlow racks with 3 or 4 channel cards (1/2 logical rack). For racks with one or two channel cards, the switch remains "OFF" (1/4 logical rack). (See diagram for location.)

Previously, the Node Adapter polled the channel cards to determine what rack size it should be. In certain cases of failure, the Motherboard or the Channel card could cause the Node Adapter to set the rack size incorrectly.

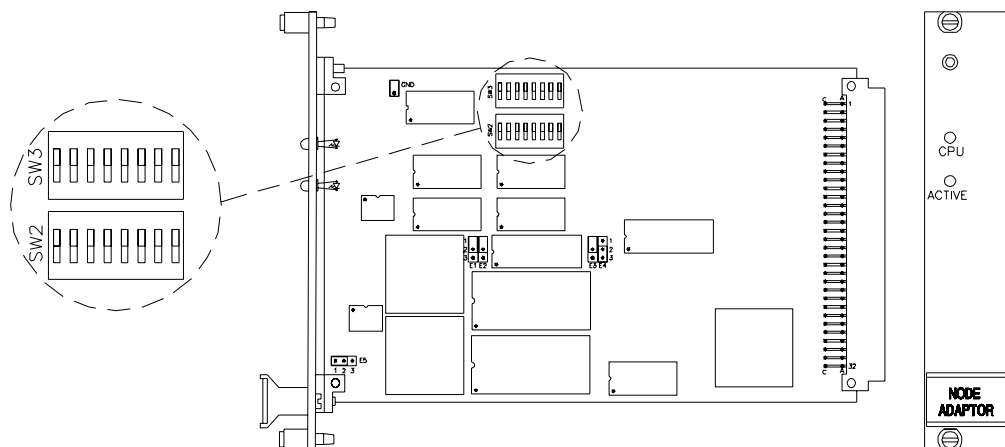


Figure 5: Node Adapter

Technical/Service Assistance

Automotive Assembly & Tier I: Telephone: 800/ 626-3565 Fax: 419/ 470-2040
Industrial Systems: Telephone: 800/ 233-3366 Fax: 419/ 470-2071
Ransburg Guns: Telephone: 800/ 233-3366 Fax: 419/ 470-2071

(Technical Support Representative will direct you to the appropriate telephone number for ordering Spare Parts.)



Form SI-02-04 Litho U.S.A. 08/02
© 2002 Illinois Tool Works Inc. All rights reserved.
Models and specifications subject to change without notice.